



UX5000

Get Started Guide



VGA Camera/Camcorder with Digital Zoom & Flash



Record 15-Second Videos



Speaker-Independent Voice Recognition



Speakerphone



UX5000

TRI-MODE

PHONE OVERVIEW



MAIN MENU



STILL PHOTOGRAPHY



Taking a Photo

1. Press the **Camera Key** to activate the viewfinder.
2. Press **right** on the Navigation Key to zoom in and **left** to zoom out. You can digitally zoom up to 5x in high, medium and low resolution.
3. To activate the flash, press the side **Flash Key** below the volume keys.
4. To take a picture, press the **Camera Key** again, or press **OK**.
5. Press the **Left Soft Key** to **Save** or the **Right Soft Key** to **Reject** the photo. Or press **OK** to send the photo to another mobile phone or e-mail address.

Note: For self-portraits, close the phone and press and *hold* the side **Camera Key**. Press one of the side volume keys to activate the viewfinder. Press the side **Camera Key** to take a photo. Pictures are automatically saved in the **Camera (1) > Photo Gallery (3)** menu.



Setting a Photo as Caller ID

1. From standby mode, press the **Right Soft Key** for **Contacts**.
2. Use the Navigation Key to highlight the desired contact and press **OK**.
3. Press the **Left Soft Key** for **Edit**.
4. Scroll to the icon (below the Memo field) and press **OK**.
5. Press **left** or **right** on the Navigation Key to select **Gallery**, then scroll down to choose the picture you want to preview and press **OK**. Press the **Left Soft Key** for **Select**.
6. Press the **Left Soft Key** for **Done**.

Changing the Resolution

1. Press the **Camera Key** to activate the viewfinder.
2. Press the **Right Soft Key** for **Options**.
3. Select **Resolution (2)** and press **OK**.
4. Select **Hi (640x480)**, **Med (320x240)** or **Lo (160x120)** and press **OK**.

Customizing Shutter Sounds

1. Press the **Camera Key** to activate the viewfinder.
2. Press the **Right Soft Key** for **Options**.
3. Select **Shutter Sound (6)** and press **OK**.
4. Select from the two available shutter sound options and press **OK**.

VIDEO RECORDING

The UX5000 can record and store 15-second video clips.



Recording a Video

1. From the **Camera (1)** menu, select **Take Video (2)** and press **OK**.
2. Press **right** on the Navigation Key to zoom in and **left** to zoom out.
3. To activate the video light, press the **Right Soft Key** for **Options**, select **Flash (3)** and press **OK**. Select **Always On** and press **OK**.
4. To start recording, press **OK**.
5. To stop recording, press the **Left Soft Key** for **Stop**.
6. To save the video, press the **Left Soft Key** for **Save**.


Note: Videos are automatically saved in the **Camera (1) > Video Gallery (4)** menu.



Sending a Photo Message

- From standby mode, press the **Messages** icon (down) on the Navigation Key and select **New Photo Msg (3)**.
- Press the **Left Soft Key** to select from **Contacts (1)**, **Recent Call (2)** or **Online Album (3)**, or use the keypad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
- Select **Subject** and press **OK**. Enter the subject and press **OK**.
- Select **Text** and press **OK**. Enter the message (up to 1000 characters) using the keypad and press **OK**.
- Select **Picture** and press **OK**. Press **left** or **right** on the Navigation Key to select the desired image from **Gallery** or **Images** and press **OK**. Press the **Left Soft Key** for **Select**.
- Select **Sound** and press **OK**. Use the Navigation Key to select the desired sound and press **OK**.
- If you want to record a message, highlight **Sound**, then press the **Left Soft Key** to **Record**. When finished, press the **Left Soft Key** again for **Done**.
- Press the **Right Soft Key** and select **Send (2)**.

Note: The ability to send text messages or multimedia messages is subject to network service availability.

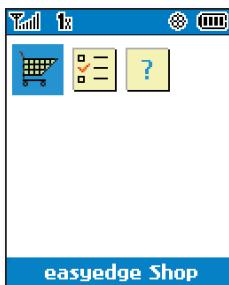

Downloading New Content From easyedgeSM

The UX5000 by LG can store downloaded content from **easyedgeSM**, a technology and service that allows you to download and use e-mail, pictures, ringers and games on your phone.

- From standby mode, press the **easyedge** icon (right) on the Navigation Key.
- Select the **easyedge Shop** icon and press **OK**.
- Select a category from the **easyedge Shop** and press **OK**.

CUSTOMIZABLE FEATURES



Changing the Call Ringer


- From the **Settings (8)** menu, select **Sounds (1)**.
- Select **Ringers (1)**.
- Select either **Caller ID (1)**, **No Caller ID (2)**, or **Restricted Calls (3)**.
- Choose from the list of available default or downloaded ringers and press **OK**.

Adjusting Volume Settings

Ringer Volume: While in standby mode, press the side volume keys to adjust the ringer volume.

Earpiece Volume: During a conversation, press the side volume keys to adjust the earpiece volume.

Silent Mode: While in standby mode, press the lower volume key until it reads **Silent** to mute all sounds.

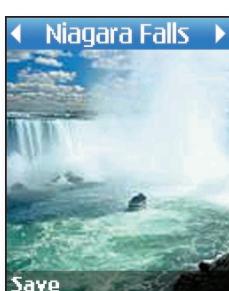

Changing the Wallpaper Image

- From the **Settings (8)** menu, select **Display (2)**.
- Select **Screens (3)**, then select **Wallpaper (1)**.
- Press **left** or **right** on the Navigation Key to select the desired category (**Default**, **Images**, **Message Pictures** or **Gallery**), then scroll down to select an image and press **OK** to preview.
- To preview other images in the selected category, press **left** or **right** on the Navigation Key.
- Press the **Left Soft Key** for **Save**.

Changing the Theme Colors

- From the **Settings (8)** menu, select **Display (2)** and press **OK**.
- Select **Theme Colors (6)** and press **OK**.
- Select from the list of four available theme colors and press **OK**.



Using Voice Commands

1. From standby mode, press the side **Voice Command Key**.
2. You will be asked to "Please Say a Command." Clearly speak a command from the list:
 - Contacts:** to call a contact from your phone book
 - Digit Dial:** to dial a phone number by speaking the digits
 - Redial:** to call a recently dialed number again
 - Voice Mail:** to call your Voice Mail
 - Driving:** to turn on speakerphone and voice commands for safe, hands-free driving
 - Schedule:** to check scheduled events
 - Time:** to hear the current time

Recording a Voice Memo

1. Press and *hold* the side **Voice Memo Key**.
2. Start recording after the tone. To stop recording, press the **Left Soft Key for Done**.

Note: Recorded voice memos can be found in the **Tools (7) > Voice Memo (4)** menu.

Activating Speakerphone

1. During a call, press the **Speakerphone** icon (up) on the Navigation Key for hands-free conversation.
2. Press the **Speakerphone** icon (up) on the Navigation Key a second time to return to normal conversation.



Scheduling an Event

1. Press the **Schedule** icon (left) on the Navigation Key.
2. Highlight the event date using the Navigation Key and press the **Left Soft Key for Add**.
3. You may set the appropriate start and end times, content, voice memo, recurrence (if any), alarm and ringer by scrolling to the corresponding field, and entering the desired information and pressing **OK**.
4. Press **Left Soft Key for Save**.

CONTACTS



Adding a New Contact Entry

1. From the **Contacts (2)** menu, select **New Number (2)**.
2. Enter the telephone number and press **OK**.
3. Select a label (**Home, Home2, Office, Office2, Mobile, Mobile2, Pager, Fax, Fax2 or None**) and press **OK**.
4. Enter a name for the entry and press **OK**. Highlight the number and press the **Right Soft Key for Options**, then select **Set Speed Dial (3)** and press **OK**. Enter the speed dial number (2-99) and press **OK**.
5. Add more phone numbers, e-mail addresses or press the **Left Soft Key for Done**.



Customizing Avatars

This function allows you to personalize and manipulate a character's face, clothing, accessories and hair and assign it to a phone book entry's Caller ID.

1. From standby mode, press the **Right Soft Key for Contacts**, then scroll to the desired entry and press **OK**.
2. Press the **Left Soft Key for Edit**.
3. Scroll to the icon (below the Memo field) and press **OK**.
4. Press **left** or **right** on the Navigation Key until the header indicates **Avatar** and press **OK**.
5. Press **up** or **down** on the Navigation Key to select a customizable classification (**Face, Hair, Deco, Pants** or **Clothes**).
6. Press **left** or **right** on the Navigation Key to scroll through the **Shape** options of the selected classification. When you're finished, press the **Left Soft Key for Done**.

MENU TREE

CAMERA (1)		6. Saved 7. Msg Settings > 1. Auto Save > 2. Auto Erase > 3. Text-Auto View > 4. Photo-Auto Receive > 5. Text-Callback # > 6. Edit Voice Mailbox # > 7. Entry Mode > 8. Quick-Text > 9. Text-Auto Play > 0. Text-Signature 8. Erase All > 1. Inbox > 2. Outbox > 3. Saved > 4. All	3. Alarm Clock > 1. Alarm 1 > 2. Alarm 2 > 3. Alarm 3 > 4. Quick Alarm 4. Voice Memo 5. My Shortcut 6. Notepad 7. EZ Tip Calc 8. Calculator 9. World Clock	SETTINGS (8) 1. Sounds > 1. Ringers > 2. DTMF Length > 3. Volume > 4. Message Alerts > 5. Service Alerts > 6. Power On/Off Tone 2. Display > 1. Banner > 2. Backlight Main LCD Key Light Timer > 3. Screens Wallpaper Power On Power Off > 4. Menu Style > 5. Clocks Normal Analog Digital > 6. Theme Colors > 7. Contrast Main LCD Front LCD	PHONE INFO (9) 1. My Phone Number 2. S/W Version 3. Icon Glossary 4. Shortcut Help	
CONTACTS (2)						
RECENT CALLS (3)						
MESSAGES (4)						



LG Electronics MobileComm U.S.A., Inc. | 10225 Willow Creek Road, San Diego, CA 92131-1639

Customer Service: 800-793-8896 | Accessories: 800-851-6734 | www.LGUSA.com

All materials in this training manual including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. ALL RIGHTS RESERVED Copyright © 2005 LG Electronics, Inc. All product and service marks contained herein that are not LG Electronics, Inc. proprietary marks are the trademarks of their respective owners. LG Electronics, Inc. makes no claim to such properties. Phone features and specifications are subject to change without prior notice. The use of non-LG approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. Battery talk and standby times are estimates only. Use of certain features and other conditions including, but not limited to, battery age and condition, charging habits, temperatures to which the battery is exposed, and use in digital mode will cause actual standby and talk time to vary. The amount of talk time used will impact the standby time. In the same way, the amount of time that the phone is in standby mode will impact the talk time.